

Leaflet No.	Part No.
8200971	Various
Supersedes Leaflet No.	
- - -	

INSTRUCTION LEAFLET

SAFETY NOTES:

- 1 This part should **ONLY** be fitted by suitably qualified persons having technical competence, applicable product knowledge and suitable tools and test equipment.
- 2 Servicing of electrical appliances must be undertaken with the appliance disconnected (unplugged) from the electrical supply.
- 3 Servicing must be preceded by Earth Continuity and Insulation Resistance Checks.
- 4 Personal safety precautions must be taken to protect against accidents caused by sharp edges on metal and plastic parts.
- 5 After servicing, the appliance must be rechecked for Electrical Safety.

Dishwasher Lower Door Seal Kit

Contents:- Lower Door Seal Strip - Rubber (1), Seal Retaining Clip - Spring type (3)

Fitting Instructions:

1. Disconnect the dishwasher from the electricity supply.
2. Remove the outer door panel.
3. Remove the old lower door seal which is fitted (gripped) to the stainless steel inner door panel.

Please Note:

The replacement seal now fits to the lower front edge of the tank and NOT to the inner door panel.

4. Referring to the illustration, slide the new seal onto the front edge of the tank - see below.
 5. Slide the 3 metal spring clips (supplied) over the rubber seal to secure it to the tank front edge. Ensure they are equally spaced and that the seal is straight and centred.
 6. The free end of the seal is positioned against the inner face of the inner door panel.
- NOTE:** The free end of the seal **IS NOT** positioned underneath the lower edge of the inner door panel.
7. Reassemble the door outer panel, checking for correct operation when opening and closing.
 8. When testing the dishwasher, check carefully for leaks.

